


# "TANK STEERING"

Uses two channels of Tx to control each motor from its own stick. Differential motor speed is applied with your thumbs, if required, and is independent of rudder commands. Alternatively electronic mixing from your Tx may be possible (see R/C system manual). If fitted, the Bow Thruster is independent and controlled from LH stick.

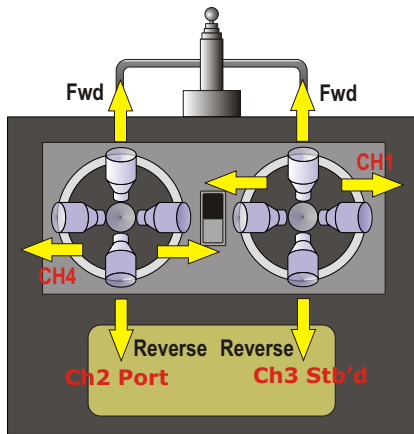

4/6 Channel Transmitter

